

Material
OILES#2000 (Sintered Alloy + Steel)

ORDERING METHOD

CWT - 38150
Parts No.




Ex.:W38mm×L150mm

- Socket Head Cap Screw attached to a CWT.
- The sliding direction is all directions.


CWT-2250~22100,2850~28100
3850~38100,4850~48100

CWT-22150,28150,38150,48150


CWT-7575~75125,100100,100125

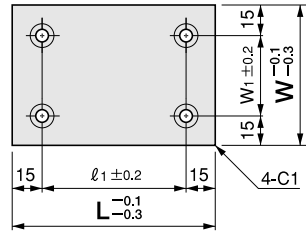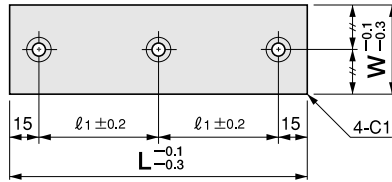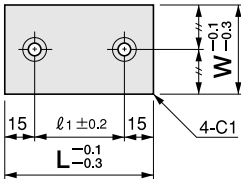


CWT-75150,100150

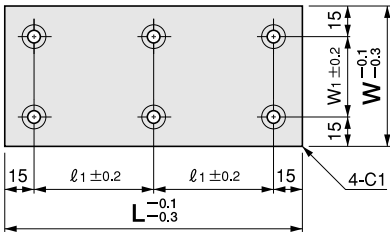

Cross Section

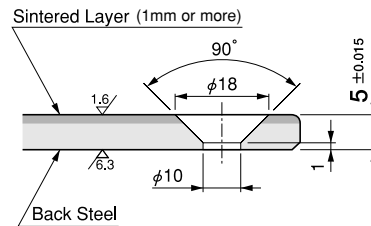


Chamfer

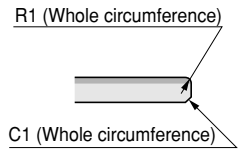


Parts No.	W	L	W1	ℓ1	Holes
CWT-2250	22	50		20	
CWT-2275		75		45	2
CWT-22100		100		70	
CWT-22150	28	150		60	3
CWT-2850		50		20	
CWT-2875		75		45	2
CWT-28100	38	100		70	
CWT-28150		150		60	3
CWT-3850		50		20	
CWT-3875	48	75		45	2
CWT-38100		100		70	
CWT-38150		150		60	3
CWT-4850	75	50		20	
CWT-4875		75		45	2
CWT-48100		100		70	
CWT-48150	100	150		60	3
CWT-7575		75		45	
CWT-75100		100		70	4
CWT-75125	150	125	45	95	
CWT-75150		150		60	6
CWT-100100		100		70	
CWT-100125	100	125	70	95	4
CWT-100150		150		60	6

CAD

- Socket Head Cap Screw for CWT
- Included with the CWT Plate.

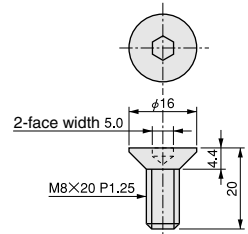

When administering tap-machining for installation on the mounting surface, please perform chamfering of corners of C2 and over.

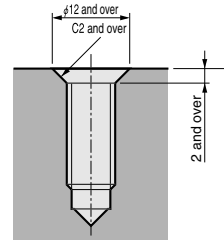

- Socket head cap screw for CWT included.